

CONVERSION OF FITTING FROM PENDANT (FIG 2) TO FLUSH MOUNTING (FIG 3).
(The diagram shown below is representative and may not exactly match your fitting).

1. Unscrew suspension loop "A" from top of fitting by turning, (you will need to twist the chain and the ceiling cup at the same time to avoid entanglement) (Figure 2).
2. Loosen and remove locking washer and nut "D" from inside ceiling plate "C". You can then discard loop "E", chain "B" and loop "A". (Figure 2).
3. Fit ceiling cup "C" to the centre of the fitting by placing ceiling cup "C" over the exposed thread at the top of the centre stem "F". (Figure 3).
4. Lock the ceiling cup "C" to the centre stem "F" by using locking washer and nut "D" (Figure 3).
5. Fix to the ceiling as per installation instructions on previous page. (Flex can be shortened to allow neat and safe electrical connections

